



CONNECT -EZ "V" POSITIONING

REMEDIES FOR MIS-LOCATED V-CHAMBERS

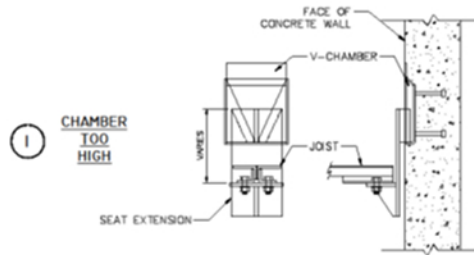


CHAMBER TOO HIGH – CONNECT -EZ CAN PROVIDE A CUSTOM SEAT EXTENSION TO SUPPORT THE JOIST AT THE DESIGN BEARING ELEVATION

REMEDIES FOR MIS-LOCATED V-CHAMBERS

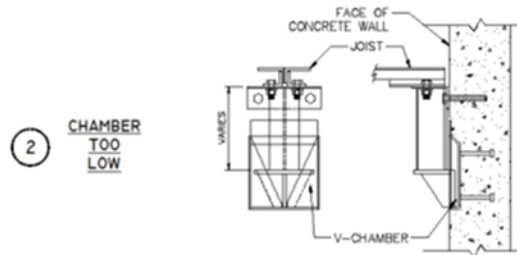

CHAMBER TOO LOW – CONNECT -EZ CAN PROVIDE A CUSTOM STUB COLUMN AND CONCRETE ANCHORS TO SUPPORT JOIST AT DESIGN ELEVATION.

REMEDIES FOR MIS-LOCATED V-CHAMBERS

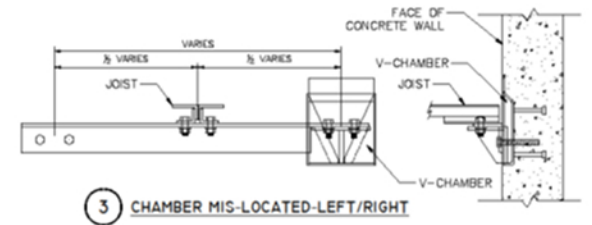

CHAMBER MISLOCATED LEFT/RIGHT – CONNECT -EZ PROVIDE A CUSTOM BEARING ANGLE AND CONCRETE ANCHORS TO SUPPORT JOIST AT THE DESIGN LOCATION.